



Cat. No. 60-2761

Radio-Controlled Choo Choo

Your RadioShack Radio-Controlled Choo Choo chugs and rumbles just like a real Choo Choo! You can charge forward, back up, then charge off in another direction. You can also roll the Choo Choo anywhere you like.

Note: You need four AA batteries (not supplied) to power the Choo Choo, and one 9-volt battery (not supplied) to power the controller.

INSTALLING BATTERIES

Warning: Dispose of batteries properly, do not burn or bury them.

 
Cautions:

- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the Choo Choo.
- If you do not plan to use the Choo Choo for several days, remove the batteries.

Installing the Choo Choo's Batteries

You need four AA batteries (not supplied) to power the Choo Choo. For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Use a coin to twist the slot on the battery compartment cover, then lift open the cover.

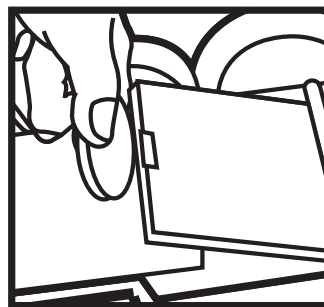


Caution: The battery compartment cover is hinged. Do not try to remove it.

2. Install the batteries as indicated by the polarity symbols (+ and -) marked inside the compartment.
3. Close the cover, making sure it snaps shut.

Note: If the Choo Choo moves slowly or not at all, replace the batteries.

Installing the Controller's Battery

 You need one 9-volt battery (not supplied) to power the controller. For the best performance and longest life, we recommend a RadioShack alkaline battery.

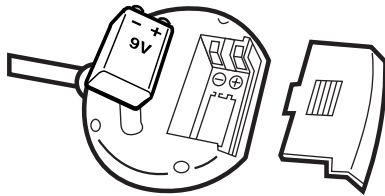

1. Press down on the battery compartment cover and slide it off to remove it.
2. Place a fresh battery in the compartment matching the polarity symbols marked inside.
3. Replace the cover, making sure it snaps into place.

 
If the motor runs but the Choo Choo does not respond to the controller, replace the battery.

OPERATION


Warning: Never play with your Choo Choo in the street.

Follow these steps to control the Choo Choo with the controller.

1. Set **ON/OFF** on the back of the Choo Choo to **ON**.

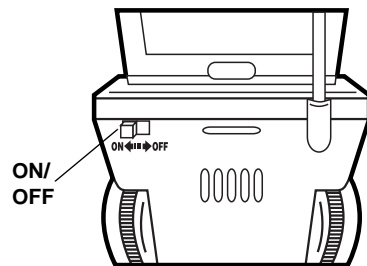

 2. Place the Choo Choo on the floor, then press and hold down the button on the controller. The Choo Choo chugs forward in a straight line with the light on and train chugging sounds.

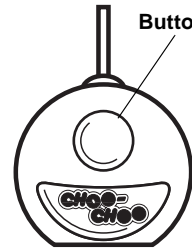

Notes:

- The Choo Choo works best on a clean, flat surface.
 - The Choo Choo stops when it runs into something, but the motor keeps running. Release the button, then go move the train by hand.
3. Release the button to stop the Choo Choo.
 4. Hold down the button again. The Choo Choo goes in reverse, turning slightly to the left. To make the Choo Choo go forward again, release then hold down the button again.

5. When you finish playing with the Choo Choo, set **ON/OFF** to **OFF**.

CARE AND MAINTENANCE

- Do not use the Choo Choo on a wet floor or in mud or sand.
- Clean it with a damp cloth to keep it looking new.
- Do not take it apart. If something is wrong with it, take it to your local RadioShack store for help.
- If someone is operating a CB transceiver nearby, it might interfere with your control of the Choo Choo. If this happens, move your Choo Choo to a new location or wait until the CB stops transmitting.

Modifying or tampering with the Choo Choo's internal components can cause a malfunction and might invalidate your Choo Choo's warranty and void your FCC authorization to use it. If your Choo Choo is not performing as it should, take it to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

Your Choo Choo might cause TV or radio interference even when it is operating properly. To determine

whether your Choo Choo is causing the interference, turn off your Choo Choo. If the interference goes away, your Choo Choo is causing it. Try to eliminate the interference by:

- moving your Choo Choo away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Choo Choo with its controller.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate this product.

USER-REPLACEABLE PARTS

You can order these easily replaceable parts for your Choo Choo at your local RadioShack store.

Description	RSU #	NP #
Transmitter Battery Door	12169314	DB-91001
Transmitter (27 MHz)	12169322	ZA-90197
Owner's Manual	12169876	MU-6002761

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

07A99

Printed in Hong Kong